

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

713.163

passend für / suitable for
adaptable à / adaptable a

BMW




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



233.380
M 12x1,5x200

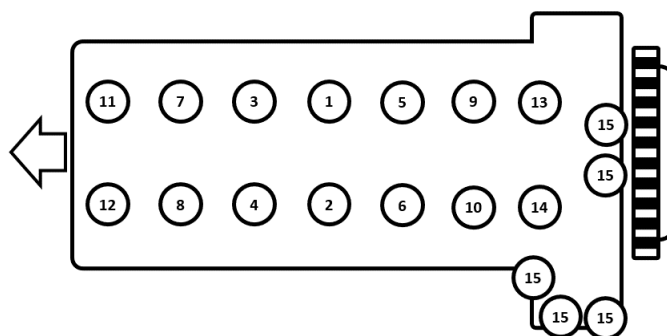

Anziehen/
Tightening/
Serrage/
Apriete

1-14:
50 Nm
➤ 120°
➤ 120°
15:
19 +/- 3 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot. N57N/Z D30 ÷1, 45mm

F30 330d

F07/F10/F11 530d, dX, 535d, dX

F06/F12/F13 640d, dX

F01/F02 730d, dX, 740d, dX/ 730Ld

F25 X3 30dX, 35dX

1 Loch/ 1 hole/ 1 noce

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

26/06/25

713.163