

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

633.950

passend für / suitable for
adaptable à / adaptable a

Toyota / Lexus

 


Das Original



Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

A



B

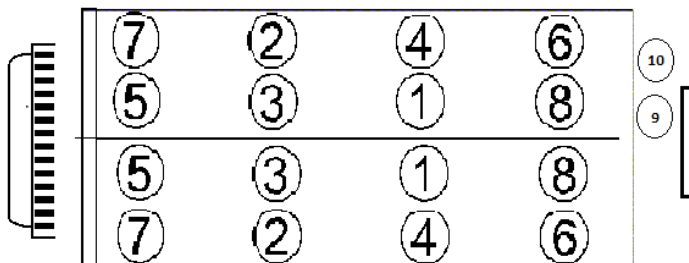 

9 / 10 = M8

Anziehen/
Tightening/
Serrage/
Apriete

18 Nm
36 Nm
➤ 90°
➤ 90°
M8 = 30Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot.: 1GR-FE / 6GR-FE

4,0 Ltr. V6 Dual VVT-i

176-282 kw (239-282 PS)

08.2009 ->

mounting position: left

FJ Cruiser, 4Runner, Land Cruiser Prado,

Land Cruiser, Coaster,

Tundra, Lexus GX400/460

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

26/06/25

633.950