

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

650.420

passend für / suitable for
adaptable à / adaptable a


Ford



Das Original


Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

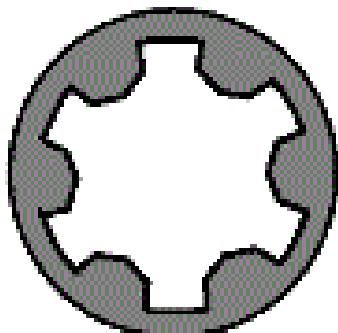

477.970

M 10x1,5x105 PL10

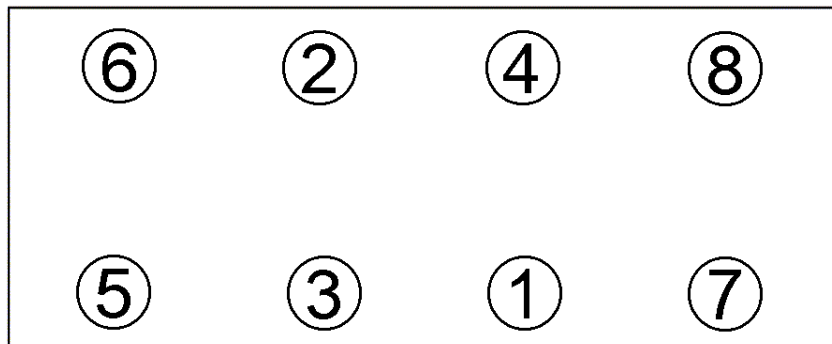

Anziehen/
Tightening/
Serrage/
Apriete

- ⊙ 10 Nm
- ⊙ 40 Nm
- - 45°
- 30 Nm
- 90°
- 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 73mm ÷: Ø,70mm

Mot:

M1CB, M1CA, M1DA, M1JA, M1JC, M1JE, M2DA
SFDA, M2GA, M2GB, P4JC, P4JD, P4JA, P4JB
SFCD, SFCC, SFCA, SFCB, SFJA, SFJB, SFJD
SFJC, XMJA, XMJB

1.0ltr. Ecoboost / Duratec

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

26/06/25

650.420