

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

497.421

passend für / suitable for
adaptable à / adaptable a

Mercedes-Benz




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



258.920
M 11x1,5x170

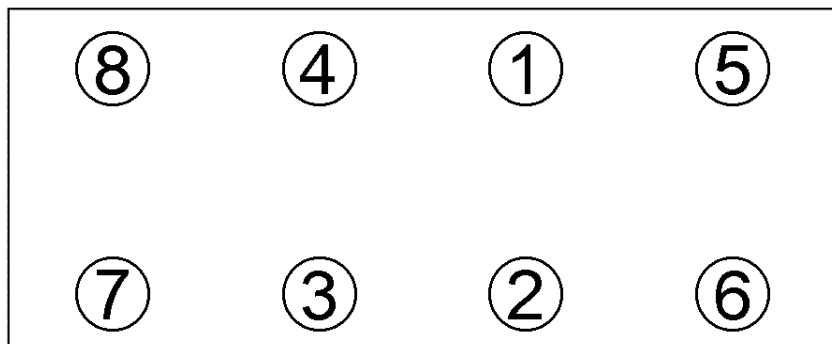

Anziehen/
Tightening/
Serrage/
Apriete

M 11
20 Nm
40 Nm
➤ 90°
➤ 90°

M 8
15 Nm
➤ 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 93,5, ÷ 0,65 mm

Mot: M 272.960, 963, 964, 967, 970, 972, 975
979, 985
Mot. 30089233>

C350, CLK350, SLK350, E350, CLS350, ML350, R350
links/left/gauche/izquierda/sinistra

Elring-Serviceteam

Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

26/06/25

497.421