

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

760.678

passend für / suitable for
adaptable à / adaptable a



Mercedes-Benz



Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

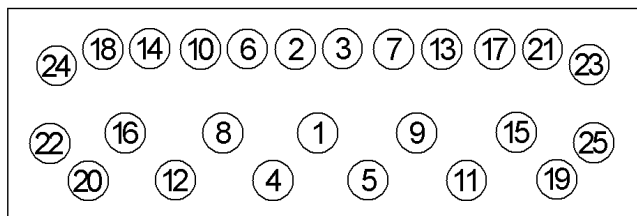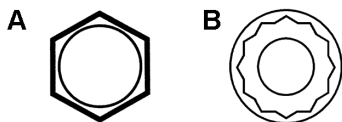

820.075
M 12x1,75x111

Anziehen/
Tightening/
Serrage/
Apriete

A
OM 322/352/362
OM 366, A, LA
> Mot. 071683

⚙ 60 Nm
90 Nm
* 80°C
110 Nm
500 km
□ 110 Nm

B
OM 366, A, LA
Mot. 071684 >

⚙ 60 Nm
90 Nm
120 Nm
➤ 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

OM 322 M.B. 322.910>919/970/971

079240

OM 352 M.B. 352

M.B. 353

OM 366

OM 366 A

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

26/06/25

760.678