



|                                                  |                            |                                                                                                           |
|--------------------------------------------------|----------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Anziehvorschrift Zylinderkopf</b>             | <b>527.750</b>             | <br><b>Das Original</b> |
| <b>Tightening Instructions for Cylinder Head</b> | passend für / suitable for |                                                                                                           |
| <b>Instructions de serrage pour culasse</b>      | adaptable à / adaptable a  |                                                                                                           |
| <b>Prescripciones de apriete para culatas</b>    | <b>Nissan</b>              |                                                                                                           |

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

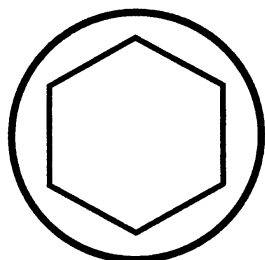

267.660  
M 11x1,25x123

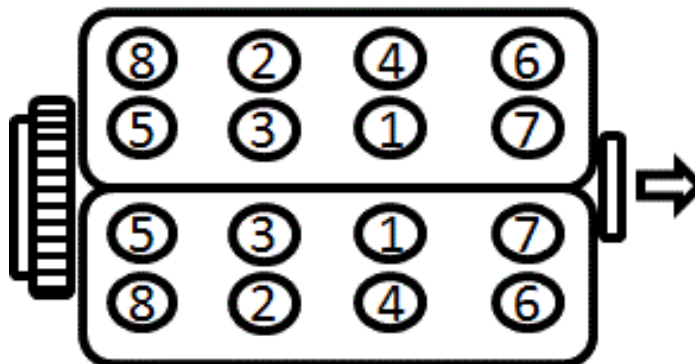

Anziehen/  
Tightening/  
Serrage/  
Apriete

-  49 Nm
-  98 Nm
-  360°
-  40 Nm
-  90°
-  90°

Zeichenerklärung / Explanations / Explication / Explicacion

|                                                                                    |                                             |                              |                                |                                       |
|------------------------------------------------------------------------------------|---------------------------------------------|------------------------------|--------------------------------|---------------------------------------|
|  | neue Zylinderkopf-schrauben verwenden       | use new cylinder head bolts  | utiliser des vis neuves        | emplar tornillos nuevos               |
|  | Warmlauf (80°C)                             | warm up time (80°C)          | chauffage (80°C)               | calentamiento (80°C)                  |
|  | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
|  | Setzzeit                                    | relaxation time              | durée de tassement             | tiempo de espera                      |
|  | Drehwinkel                                  | torque angle                 | angle de serrage               | ángulo de giro                        |

**Motortyp / Engine type / Type de moteur / Tipo de motor**

**Elring-Serviceteam**  
Fon +49 7123 724 799  
Fax +49 7123 724 798  
[service@elring.de](mailto:service@elring.de)

26/06/25

**\*527.750\***