

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

789.180

passend für / suitable for
adaptable à / adaptable a

Fiat, Lancia, Alfa Romeo



Das Original


Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



524.160

M 12x1,25x198

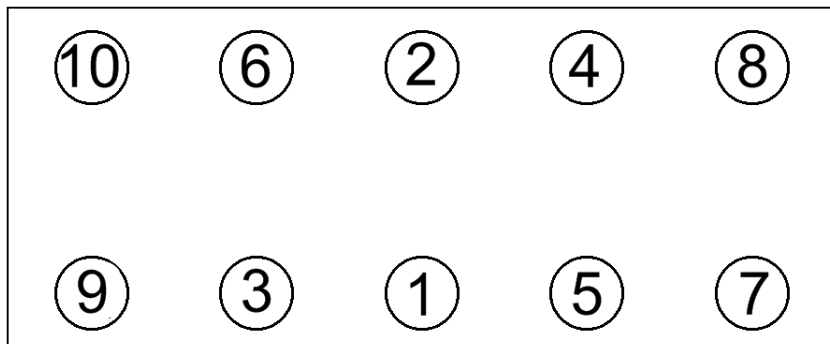

Anziehen/
Tightening/
Serrage/
Apriete

- 20 Nm
- 63 Nm
- > 90°
- > 90°
- > 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 80,5 mm ÷: 0,82 mm

Mot: 1,6 ltr. JTD

66-88 kW (90-120 PS)

Nuovo Bravo, Linea, Grande Punto, Idea,
Punto Evo, Nuovo Doblo, Mito, Giulietta,
Musa, Nuovo Delta

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

26/06/25

789.180